 


## 1 Description

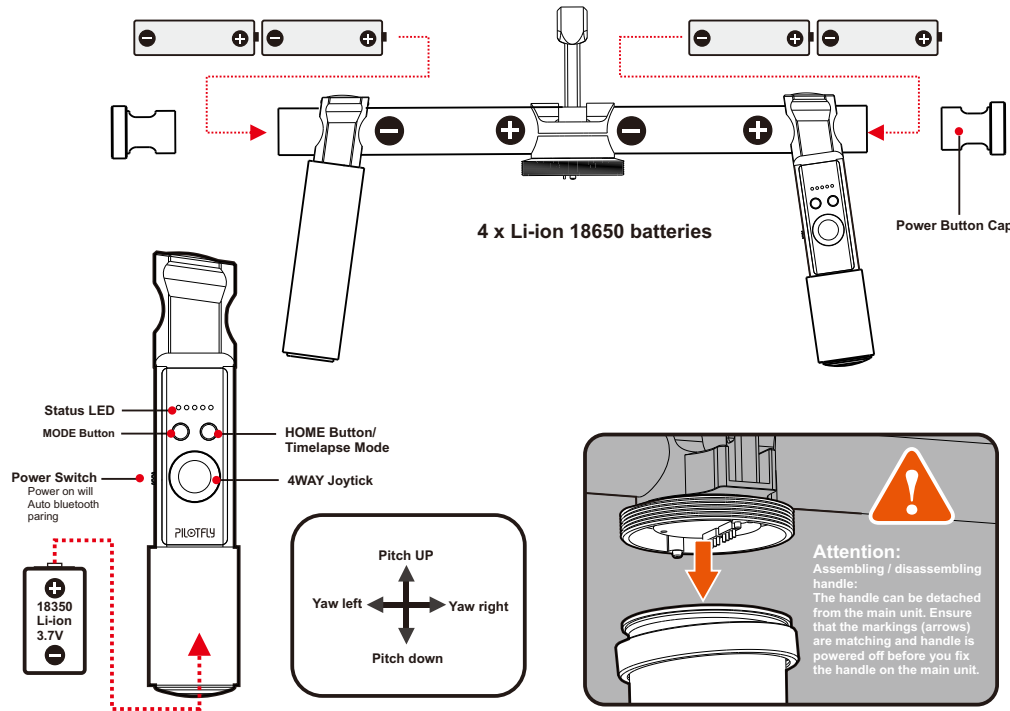

## 2 Power on and Auto Pairing

- 2.1. LEDs will flash in a row while pairing.
- 2.2. LED on left side will be constant on when auto pairing was successful.

## 3 Mode description

| Operation      | Function*          | Explanation   |
|----------------|--------------------|---|
| Single tap     | 【Follow mode】      | The pitch and heading direction follows your movements. |
| Double tap     | 【Lock mode】        | Pitch and Roll is locked, Yaw follows the target.       |
| Triple tap     | 【Head mode】        | Camera stays in its current orientation.                |
| Quadruple tap  | 【Follow roll mode】 | Camera follows your movements for Roll and Pitch        |
| Five times tap | 【Customer setting】 | Recommend to set for Gyro calibration                   |

| Operation        | Function*            | Explanation   |
|------------------|----------------------|---|
| Single tap       | 【Home move】          | Gimbal will go back to zero position (Home Move) selected mode is active. |
| Long press 2 sec | Joystick / Timelapse | Switches between Joystick & Timelapse mode                                |

## 4 Timelapse Mode

- 4.1. Enter mode: Long press to enter TIMELAPSE. All 5 LEDs will flash shortly which indicates Timelaps mode
- 4.2. Select Speed: Press to select the speed of rotation. LED indicates which speed mode is active. Refer to details below.
  - ○ ○ ○ ○ ○ 60s/360 degree
  - • ○ ○ ○ ○ 10min/360 degree
  - ○ • ○ ○ ○ 30min/360 degree
  - ○ ○ • ○ ○ 60min/360 degree
  - ○ ○ ○ • ○ 120min/360 degree
- 4.3. Choose direction: Double press to select the direction of YAW rotation (left or right)
  - 3 LEDs on the left will indicate for 1.5s rotation to the left ○ • ○ ○ ○
  - 3 LEDs on the right will indicate for 1.5s rotation to the right ○ ○ • ○ ○

**Note:** Pitch angle can be adjusted via joystick to get right shooting angle before starting Timelapse. YAW axis on some Pilotfly gimbals are limited and 360 degree rotation is not possible on that models. Therefore adjust YAW angle first on that models to get the maximum angle for Timelapse.
- 4.4. Start rotation: Press for 1 sec to start Timelapse rotation  
Flashing LED indicates active Timelapse speed mode (Speed can be changed any time while pressing )
- Note:** Perform a GYRO calibration while pressing the Mode button on the gimbal to prevent horizontal drift.
- 4.5. Stop rotation: Press for 1 sec to stop TIMELAPSE rotation.
- 4.6. Move Home: Tap on to initiate Home move function.
- 4.7. Leave Timelapse Mode: Long press to exit Timelapse mode and return to Joystick mode.

## Specification

|                   |   |
|-------------------|---|
| Size:             | 330 x 150 x 40 mm   |
| Weight:           | 450 g   |
| Battery:          | 4x 3.7V, 2600mAh Lipo rechargeable batteries<br>- Usage time approx. 27 hours |
| Joystick Battery: | 1x 3.7V 800mAh Li-ion rechargeable battery<br>- Usage time approx. 20 hours   |
| Wireless range:   | approx. 3m  |



Pilotfly Channel / Video tutorial

Taiwan

**Pilotfly Technology Co., Ltd.**  
2F-2, No.118, Sec. 1, Jiafeng S. Rd.  
Zhubei City, Hsinchu County 30271  
[www.pilotfly.com.tw](http://www.pilotfly.com.tw)

Germany

**Pilotfly UG** (haftungsbeschränkt)  
Wendelsteinstr.12  
86163 Augsburg  
[www.pilotfly.de](http://www.pilotfly.de)



Technical Support via E-mail:  
[info@pilotfly.de](mailto:info@pilotfly.de), [pilotflyteam@gmail.com](mailto:pilotflyteam@gmail.com)



Welcome to PILOTFLY fans  
<http://www.facebook.com/Pilotflytech>